

BATHROOM RADIATOR INSTRUCTIONS

Druk op de toets 'Aan/Stand-by' om uw radiator in of uit te schakelen. Wanneer het apparaat is ingeschakeld toont het onderste gedeelte van het display de tijd en het bovenste gedeelte de huidige modus en de temperatuur. In de stand-by-modus worden de tijd, de dag van de week en het bericht „Stb“ weergegeven.

Opmerking: wanneer het apparaat in de stand-by-modus gaat, piept het apparaat tweemaal. Wanneer het apparaat actief wordt, piept het eenmaal.



Basisprogramma's

Door op de toets 'prog' te drukken kunt u schakelen tussen de verschillende basisprogramma's/modi, namelijk:



Modus stuurdraad



Dag/comfort-modus



Nacht-modus



Vorstbeveiligingsmodus



Boost-modus



Chrono

Press the 'On/Standby' button to switch your radiator on or off. When the appliance is switched on, the lower part of the display shows the time and the upper part shows the current mode and temperature. In standby mode, the time, day of the week, and the message "Stb" are displayed.

Note: when the appliance enters standby mode, it beeps twice. When the appliance becomes active, it beeps once.

Basic programs:

By pressing the 'prog' button, you can switch between the different basic programs/modes:

- Wired mode
- Day / comfort mode
- Night mode
- Frost protection mode
- Boost mode (2h)



Wired mode

This mode is not applicable in the Netherlands and therefore should not be used.

Day / comfort mode

Comfort mode keeps the room temperature stable at a selected value. Press the 'prog' button until the 'comfort program' is displayed. Use the + and – buttons to select the desired temperature. This becomes active as soon as it stops flashing.

Night mode

In night mode, you set a lower temperature than in comfort mode. It is recommended to set this mode at night or when the room is not used for more than 2 hours. Press the 'prog' button until the 'night program' is displayed. Use the + and – buttons to select the desired temperature. This becomes active as soon as it stops flashing.

Frost protection mode

In frost protection mode, the temperature is set to 7 °C. The appliance activates the heating element when the room temperature drops below 7 °C. It is recommended to use this mode when the room is not used for several days. Press the 'prog' button until the 'frost protection program' is displayed.

Boost mode

Boost mode can be used to quickly heat the room or to preheat towels. Press the 'prog' button until the 'boost program' is displayed. The radiator operates at maximum power for 2 hours. After this, the boost mode is automatically deactivated, and the appliance returns to the previously set mode. The user can switch to another operating mode at any time by pressing the 'prog' button.