



DISHWASHER INSTRUCTIONS

5. CONTROL PANEL

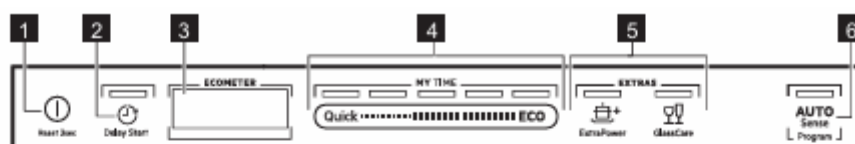

- 1** On/Off button / Reset button
- 2** Delay start button
- 3** Display
- 4** MY TIME program selection bar
- 5** Option buttons (EXTRAS)
- 6** AUTO Sense program button

5.1 Display

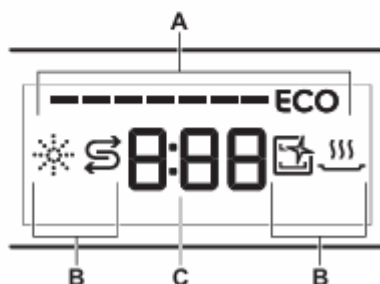

A. ECOMETER

- B. Indicators
- C. Time indicator

5.2 ECOMETER



The ECOMETER indicates how the programme selection impacts energy and water consumption. The more bars are on, the lower the consumption is.

ECO indicates the most environmentally friendly programme

selection for a normally soiled dishwashing load.


5.3 Indicators

Indicator	Description
	Rinse aid indicator. It is on when the rinse aid dispenser needs refilling. Refer to "Before first use" .
	Salt indicator. It is on when the salt container needs refilling. Refer to "Before first use" .
	Machine Care indicator. It is on when the appliance needs internal cleaning with the Machine Care programme. Refer to "Care and cleaning" .
	Drying phase indicator. It is on when you select a programme with the drying phase. It flashes when the drying phase operates. Refer to "Programme selection" .

6. PROGRAMME SELECTION

6.1 MY TIME

MY TIME selection bar allows to select a suitable dishwashing cycle based on programme duration.

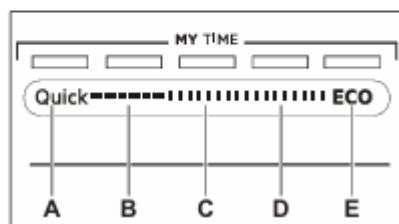

- A. **Quick** is the shortest programme (30min) suitable for dishwashing a load with fresh and light soil.
- B. **1h** is a programme suitable for dishwashing a load with fresh and lightly dried-on soil.
- C. **1h 30min** is a programme suitable for dishwashing and drying normally soiled items.
- D. **2h 40min** is a programme suitable for dishwashing and drying heavily soiled items.
- E. **ECO** is the longest programme offering the most efficient use of energy and water consumption for

crockery and cutlery with normal soil. This is the standard programme for test institutes. ¹⁾

6.2 AUTO Sense

The AUTO Sense programme automatically adjusts the dishwashing cycle to the type of load.

The appliance senses the degree of soil and the amount of dishes in the baskets. It adjusts the temperature and quantity of water as well as the wash duration.

6.3 EXTRAS

You can adjust the programme selection to your needs by activating EXTRAS.

ExtraPower

 ExtraPower improves the dishwashing results of the selected programme. The option increases the wash temperature and duration.

GlassCare

 GlassCare prevents delicate load, glassware in particular, from damaging.

The option prevents rapid changes in the dishwashing temperature of the selected programme and reduces it to 45 °C.

6.4 Programmes overview

Pro-gramme	Dishwasher load	Degree of soil	Programme phases	EXTRAS
Quick	Crockery, cutlery	Fresh	- Dishwashing 50 °C - Intermediate rinse - Final rinse 45 °C - AirDry ¹⁾	- ExtraPower - GlassCare
1h	Crockery, cutlery	Fresh, lightly dried-on	- Dishwashing 60 °C - Intermediate rinse - Final rinse 50 °C - AirDry ¹⁾	- ExtraPower - GlassCare
1h 30min	Crockery, cutlery, pots, pans	Normal, lightly dried-on	- Dishwashing 60 °C - Intermediate rinse - Final rinse 55 °C - Drying - AirDry ¹⁾	- ExtraPower - GlassCare
2h 40min	Crockery, cutlery, pots, pans	Normal to heavy, dried-on	- Prewash - Dishwashing 60 °C - Intermediate rinse - Final rinse 60 °C - Drying - AirDry ¹⁾	- ExtraPower - GlassCare
ECO	Crockery, cutlery, pots, pans	Normal, lightly dried-on	- Prewash - Dishwashing 50 °C - Intermediate rinse - Final rinse 55 °C - Drying - AirDry ¹⁾	- ExtraPower - GlassCare
AUTO Sense	Crockery, cutlery, pots, pans	All	- Prewash - Dishwashing 50 - 60 °C - Intermediate rinse - Final rinse 60 °C - Drying - AirDry ¹⁾	Not applicable

Pro-gramme	Dishwasher load	Degree of soil	Programme phases	EXTRAS
Machine Care	For cleaning the appliance interior. Refer to "Care and Cleaning".		- Cleaning 70 °C - Intermediate rinse - Final rinse - AirDry ¹⁾	Not applicable

¹⁾ Automatic door opening during the drying phase. Refer to "Basic settings".



AirDry is automatically activated with all programmes.

The duration of the drying phase and the door opening time vary depending on the selected programme and options.

When AirDry opens the door, the display shows the remaining time of the running programme.



CAUTION!

Do not try to close the appliance door within 2 minutes after automatic opening. This can cause damage to the appliance.



CAUTION!

If children have access to the appliance, we advise to deactivate AirDry. The automatic opening of the door may pose a danger.



When AirDry opens the door, Beam-on-Floor might not be completely visible. To see if the programme is complete, look at the control panel.