
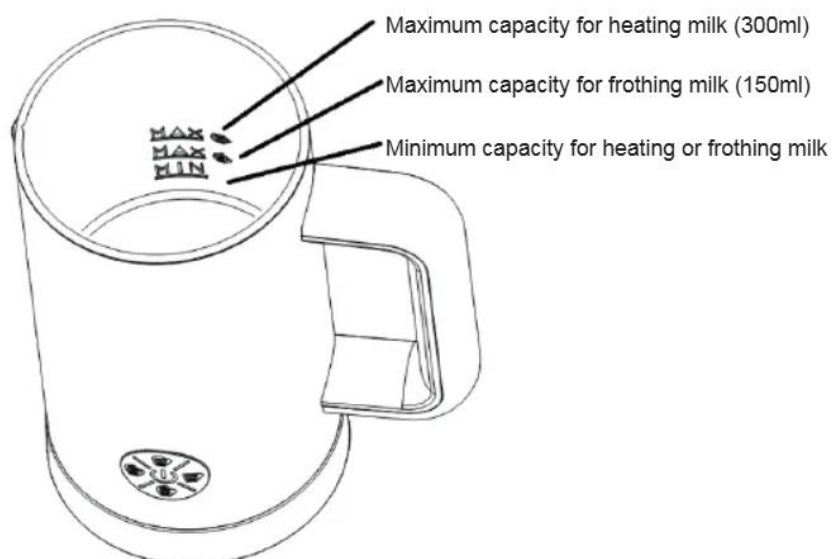


MILK FROTHER INSTRUCTIONS

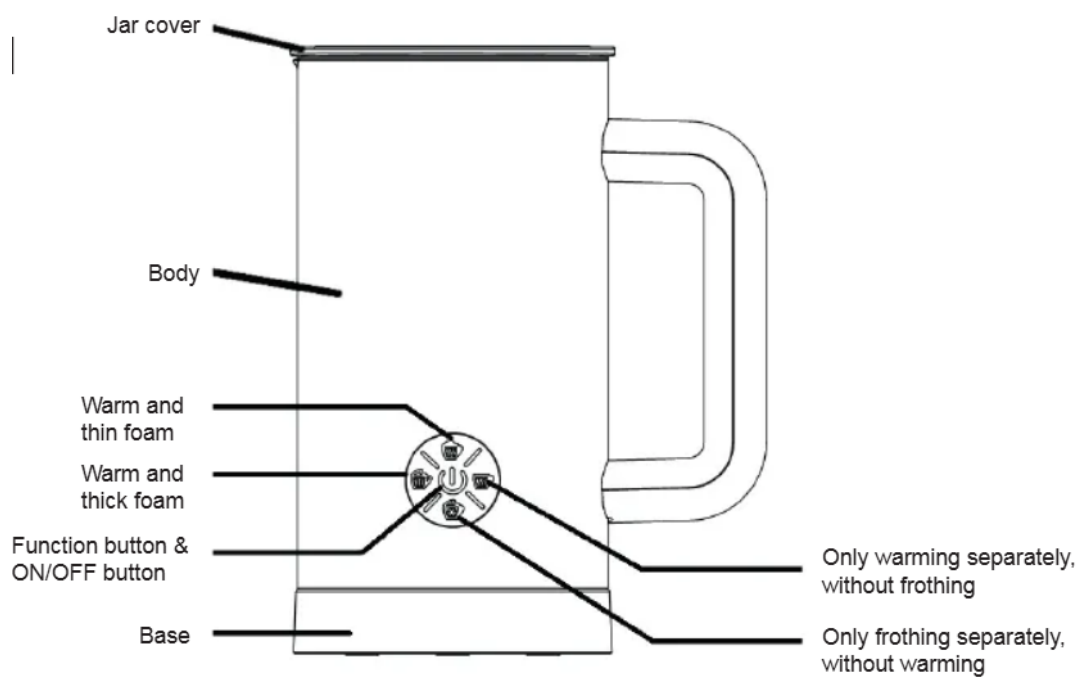

I. Warming and thick foam

1. Max. quantity of milk is 150ml(see Fig. 1) and min. quantity is 100ml.
2. Please use whole milk, frozen milk(5-10°C).
3. Press the button once, the working indicator of "Warm and thick foam" will light up.
4. When the appliance stopped operating, open the lid, pour the warmed and frothed milk out.

II. Warming and thin foam

1. Max milk quantity of milk is 150ml(see Fig. 1) and min milk quantity is 100ml.
2. Please use whole milk, frozen milk (5-10°C).
3. Press the button twice, the working indicator of "Warm and thin foam" will light up.
4. When the appliance stopped operating, open the lid, pour the warmed and frothed milk out.

III. Warming only without frothing

1. Max. milk quantity of milk is 300ml(see Fig. 1) and min. milk quantity is 100ml.
2. Please use whole milk, frozen milk (5-10°C).
3. Press the button three times, the working indicator of "Warming only without frothing" will light up.
4. When the appliance stopped operating, open the lid, pour the warm milk out.

IV. Frothing only without warming

1. Max quantity of milk is 150ml (see Fig. 1) and min milk quantity is 100ml.
2. Please use whole milk.
3. Press the button four times, the working indicator of "Frothing only without warming" will light up.
4. When the appliance stopped operating, open the lid, pour the frothed milk out.

- Do not clean the appliance with an aggressive or abrasive cleaner or with a sharp object, such as a hard brush or a knife.
- Wash lid with water and mild detergent. Rinse thoroughly and dry.
- Remove the frothing whisk and wash them completely in warm water.
- Clean the exterior of the jug with a damp cloth
- Always clean the base with a dry cloth.



Never immerse the milk frother in water or any other liquid and it must not be cleaned in the dishwasher.